

# Heavydrive<sup>®</sup>.com

YOUR TRANSPORT AND LIFTING SPECIALIST

## Operating Instructions

### Remote radio control





basic station



transmitter front



transmitter back



A - ON/OFF

B - suction on

C - tilt vertical

D - turn left

E - connect to basic station / suction off

F - suction off

G - tilt horizontal

H - turn right

I - connect to basic station / suction on

To turn on the wireless remote control, flip the red switch (A). Now pair the remote control with the system. To do this, press both "Start" buttons (E + I). The "Wireless" indicator on the system should light up yellow.

To start suction, press B once. The preliminary step for release is activated by pressing B and I. To fully release the glass, press F and E.